

**INTEGRAL POWER :**  
CODES ON DISPLAY



DISPLAY	DESCRIPTION *
<b>88--IP24</b>	StartUp message: Kit ON. 24V.
<b>88-- IP12</b>	StartUp message: Kit ON. 12V.
<b>Lb</b>	Low Battery
<b>bb</b>	= Lb
<b>E0</b>	Poor contact of the sensor wires or sensor failed
<b>E6</b>	Poor anti-freeze sensor wire contact or anti-freeze sensor faulty
<b>F0</b>	Manual operation (medium power)
<b>F1</b>	Digital thermometer function
<b>F3</b>	Long resting period
<b>F4</b>	Automatic unit operation (medium power)
<b>CA</b>	When selecting F4, this will appear on the display alternating between the selected temperature
<b>F6</b>	° F Selection

\* Please find detailed info at User's Guide and/or Troubleshooting Manual